CU915

Quick Start Guide

Use your phone for more than just talking

- Touch Screen
- Music Player
- 2.0 Megapixel Camera
- Video Share
- Mobile Email

Vu™ by LG

See User Manual for Spanish Instructions

Additional charges may apply. Visit att.com for more details. Phone features subject to change without prior notice. All phone screens are simulated. Select services are only available on an AT&T nation rate plan and may not be available in all markets.

© 2008 AT&T Knowledge Ventures. All rights reserved. Subsidiaries and affiliates of AT&T Inc. provide products and services under the AT&T brand.

LG

at&t

Getting to Know Your Phone

Earpiece

Self-Portrait Mirror

Camera

microSD™ Port

(back)

Touch Screen
(Adaptive Menu Interface)

Quick Touch Keys:

Menu Multimedia Contacts Dial

Send Key

Clear/ Back Key

Power/ End Key

Headset/ USB/ Charging Port

Side Keys:
Idle/Call: Volume Up/Down
In Menu: Scroll Up/Down

Unlock Key

Camera Key

For more details, visit att.com/DeviceSupport.
For Quick Tips, tap **Menu**, **Settings**, then **Quick Tips**.

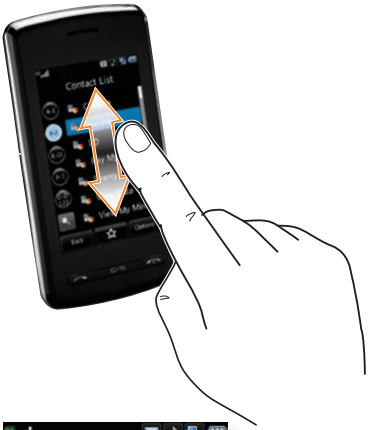

Touch Screen

Touch Protection

The touch screen and hard keys are automatically locked when the phone is inactive for 30 seconds (default).

Unlocking the Touch Screen

- Press the **Unlock Key** on the right side of the phone.

Using the Touch Screen

1. Use the tip of your finger to touch the center of a touch key. It's not necessary to press hard. A light tap will do.
2. Press and drag your finger up or down to scroll. A beep will sound when you've reached the top or bottom of a menu.
3. Press the **Power/End Key** at any time to return to the idle screen.

Entering Text

- Tap to change from alphanumeric to QWERTY keyboard mode.

Touch Screen Settings

1. Tap **Menu**, **Settings**, then **Touch Settings** to adjust the touch screen's sound and vibration.
2. If the touch screen is not responding as you expect, calibrate the screen for touch accuracy.

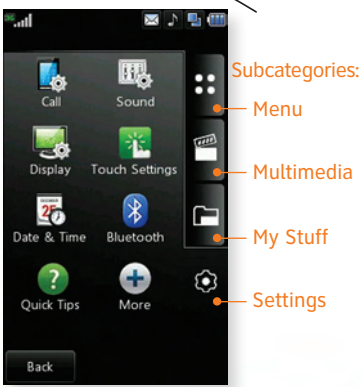

AT&T Mobile Music

AT&T Mobile Music provides the ultimate music experience. Listen to your favorite music, watch the latest music videos, and stay in the know with music news and more.

- Unlock the phone. From standby mode, tap **Multimedia**, then **AT&T Music**.
- Browse and select music from leading digital music stores like Napster® and eMusic™ with **Shop Music**.
- Listen to your music on an integrated **Music Player**.
- Enjoy dozens of commercial-free music stations with **XM Radio**.
- Watch the latest music videos under **Music Videos**.
- Personalize with ringtones and Answer Tones™ under **Shop Music**.
- Instantly ID the title and artist of a song with **MusicID** and purchase it through Napster®.
- Get the latest music news, charts, and concert info from **The Buzz**.

*microSD card and USB data cable sold separately; go to att.com/wireless.

Portable Device
Windows can perform the same action each time you connect this device.
What do you want Windows to do?
Open device to view files using Windows Explorer
Synchronize media files to this device using Windows Media Player
Take no action
Always perform the selected action
OK
Cancel

Steps may vary depending on Windows Media Player version. **Warning! Do not disconnect phone while file transfer is in progress.

Requirement: Windows Media® Player 10 or higher. Not compatible with Mac OS or iTunes.

Transfer Music

Your phone is not just for talking. You can also listen to music from your favorite artists on your phone. Transfer your favorite tunes today.

1. Make sure your music is in MP3, WMA, AAC, AAC+, or eAAC+ format.
2. Insert the microSD™ card* (gold contacts facing down) into the slot underneath the SIM card in the back of the phone by the battery.
3. Power on the phone and connect it to your PC using a USB data cable.*
4. Once the Portable Device screen pops up on your PC, select the second option and click **OK**.
5. From within Windows Media Player, songs will populate the left side of the screen. **CU915 Music Sync Player** should be the destination for the songs on the right side of the screen.
6. Check/drag** songs to be transferred, then click the **Start Sync** button.
7. When finished, tap **Cancel** on the phone, then **Yes** to exit music sync, then disconnect the USB cable.

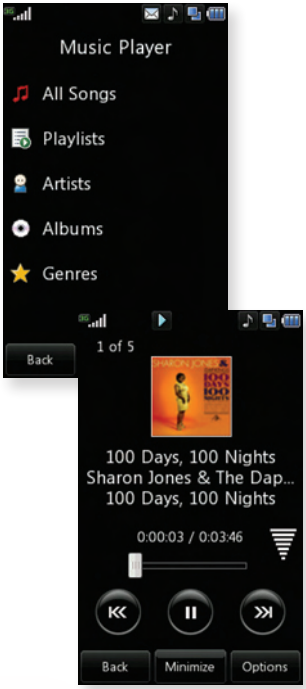

Play Music

Listen to music from your favorite artists right on your phone. To listen to music that you have transferred to your phone, follow these quick and easy steps:

1. Insert the microSD™ card* (gold contacts facing down) into the slot underneath the SIM card in the back of the phone by the battery.
2. Power on the phone. From standby mode, tap **Multimedia**, **AT&T Music**, then **Music Player**.
3. Tap **All Songs**, **Playlists**, **Artists**, **Albums**, or **Genres**. Tap a song, then **Play**.
4. Press **up** or **down** on the **Volume Keys** to adjust the volume. Tap , , or to go to the previous song, pause, or go to the next song.
5. Tap **Minimize** to access other phone functions while music is playing.
6. Press the **End Key** to exit the music player.

*microSD card sold separately; go to att.com/wireless.

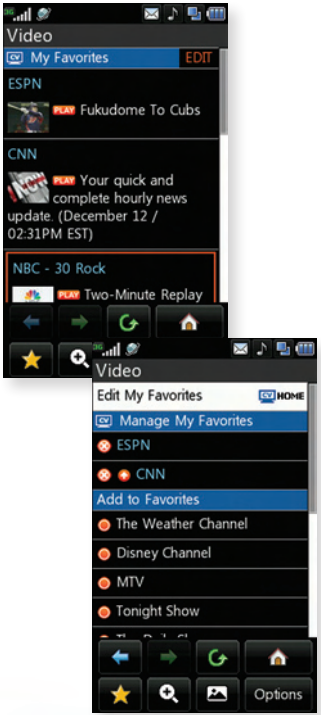

CV

CV brings your phone to life. Watch news, sports, weather, and entertainment clips on the go.

1. Unlock the phone. From standby mode, tap **Multimedia**, then **CV**.
2. Once connected, tap **Play** next to the program or category you wish to view.
3. Tap to view the content horizontally.

Personalize your CV Home Page

1. From the CV home page, tap **EDIT**.
2. Tap the content you would like added or tap to delete it from your CV home page.

Note: Parental Controls available. See box insert for details. Access to CV requires a MEdia™ Max plan.

Camera/Video

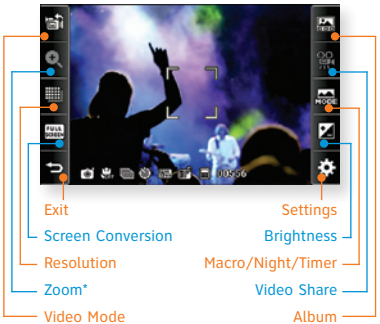

*Camera setting of 1600 x 1200 pixels does not support zoom or multishot functions.

Capture everything around you in vivid detail via the 2.0 megapixel camera with video and share it instantly.

Taking a Picture

1. Unlock the phone. Press the **Key**. Rotate the phone horizontally.
2. Refer to the callouts on the left for options.
3. Press the **Key** to take the picture. Tap to send.

Recording a Video

1. Unlock the phone. Press the **Key**. Rotate the phone horizontally.
2. Tap **Video Mode**.
3. Tap or press the **Key** to start or stop recording.

Note: Tap **Menu**, then **My Stuff** to see your pictures or videos.

Video Share

Share events the moment they happen. Video Share lets you stream live video directly to friends and family.

1. Make a phone call to another 3G Video Share capable phone by dialing the number or selecting the number from your contact list.*
2. A few seconds after the initial connection, **Video Share Ready** will show up on the screen. At this point, either calling party may start one-way video sharing.
3. Tap or press the **Key** to share. Once the other party accepts, it will take a few seconds to establish a video share connection.
4. To end video share, tap , then **Yes**.
5. The sender will have the option to save the recording by tapping **Yes**.

*Video Share is not available in all markets. Both parties must be in a 3G service area—a 3G icon must appear by the signal bars prior to a call being placed, and both parties must remain in the 3G coverage area for the duration of the video share session.

Mobile Email

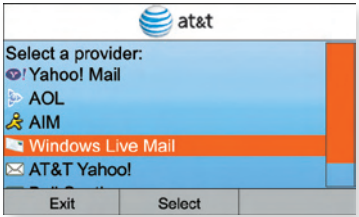

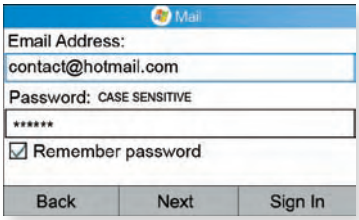

Take your email with you. With Mobile Email, you can quickly and easily access your email if your account is with one of these providers: Yahoo!®, AOL®/AIM, Windows Live™ Mail or AT&T® Yahoo!

1. Unlock the phone. From standby mode, tap **Menu**, then **Mobile Email**.
2. Rotate the phone horizontally.
3. Tap a provider, then **Select**.
4. Enter your **Screen Name/ID** or **Email** and **Password**, then tap **Sign In/On**.
5. Tap the message you want to read to download its contents.
6. Tap **Delete** or **Options** to reply or forward.

Trademarks are property of their respective owners.

All providers may not be available on all devices. Yahoo! and the Yahoo! logo are trademarks and/or registered trademarks of Yahoo! Inc. AOL, America Online and the Triangle Logo are registered trademarks of America Online. Windows Live and the Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

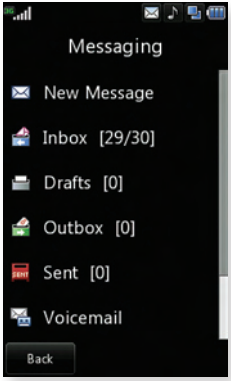

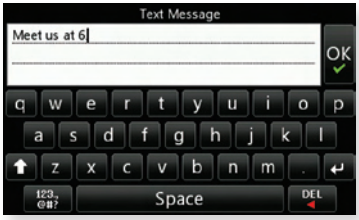

Text Messaging

When you need to communicate privately and quickly, use text messaging. You can text message to other wireless phones and email addresses.

1. Unlock the phone. From standby mode, tap **Menu**, **Messaging**, then **New Message**.
2. Tap to change from alphanumeric to QWERTY keyboard mode.
3. Rotate the phone horizontally and type your message.
4. When complete, tap OK.
5. Tap **Send To** and enter the recipient's phone number or email address or select a contact, and tap **Send**.

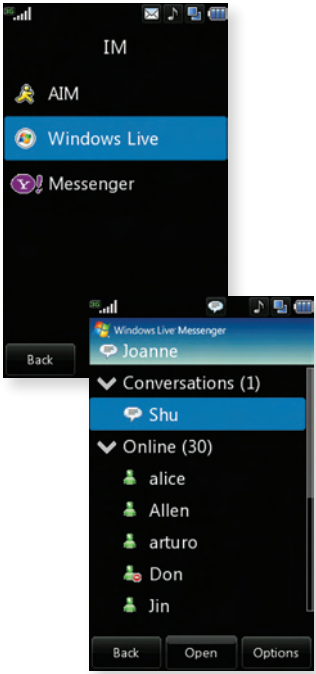

Instant Messaging

If you subscribe to an IM service such as AIM®, Windows Live™, or Yahoo!®, you can take the fun of IM on the go with your wireless phone.

1. Unlock the phone. From standby mode, tap **Menu**, then **IM**.
2. Tap an IM community, then tap **Sign In/On**.
3. Enter your **Screen Name/ID** or **Email** and your **Password**. Tap the **Auto Sign In/On** box to be automatically connected in the future. Tap **Sign In/On**.
4. Double tap a contact currently online, tap the text entry box, enter your message with the alphanumeric keypad or tap for QWERTY mode.
5. Tap **Send Msg/IM** to send.
6. To end, tap **Options** then **End Conversation**.

Note: When you receive an incoming instant message, a "new message" icon similar to this one will appear on the screen.

Trademarks are property of their respective owners.

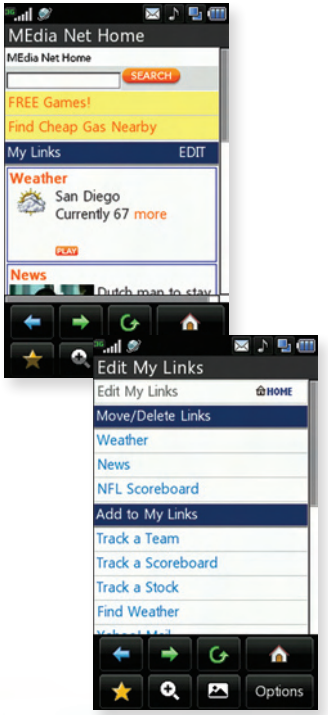

MEdia Net

With MEdia™ Net, you can get the information that is important to you from the mobile web. Your local weather, your teams' scores, and your movie theaters are all just a few taps away.

1. Unlock the phone. From standby mode, tap **Multimedia**, **MEdia Net**, then **MEdia Net Home**.
2. Scroll and tap the content you want to view.
3. Tap to view the content horizontally.

Personalize your MEdia Net Home Page

1. From the MEdia Net home page, tap **EDIT** (next to My Links).
2. Tap the content you would like added, moved, or deleted from the MEdia Net home page.

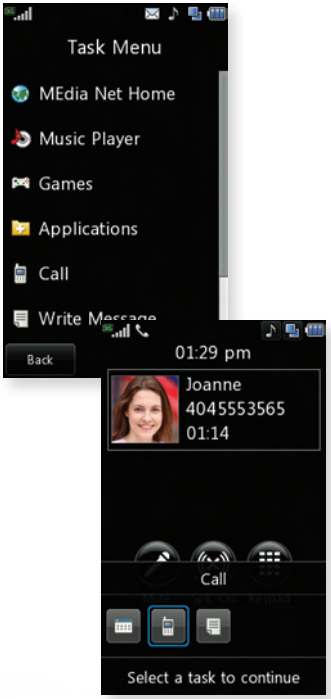

Multitasking

Multitask simultaneously with voice and data — browse the web, make calls, play games, send and receive messages, and listen to music. All at once.

1. If you're involved in one task and want to launch another, unlock the phone, tap (at the top of the screen), then tap **Task Menu** twice to select another task.
2. To switch among multiple open tasks, just tap to display the task icon bar on the bottom of the screen and tap another task icon twice.

Note: If you get a call while in another task (except playing music), you can accept the call, then return to the task while you're talking.

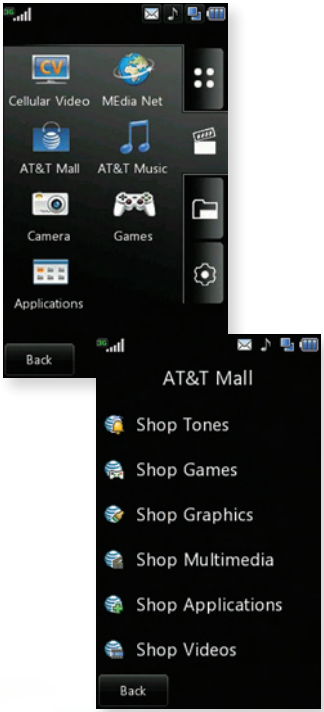

Downloadable Fun

Personalize your phone with downloadable games, graphics, and ringtones. AT&T gives you access to the latest games and graphics right on your phone and access to the best new ringtones from today's hottest artists. Personalize your phone today.

1. Unlock the phone. From standby mode, tap **Multimedia**, then **AT&T Mall**.
2. Tap **Shop Tones**, **Shop Games**, **Shop Graphics**, **Shop Multimedia, Shop Applications**, or **Shop Videos**.
3. Tap until you find the item you would like to purchase.

Optional Accessories

Accessories for productivity, convenience, and fashion are available at att.com/wireless.

Stereo Headset*

USB Data Cable*

microSD™ Card

Carrying Case

Vehicle Power Charger

Bluetooth® Headset*

*Available with the Essential Pack